



Stecker-Kabel-Adapter für IPaq

① Typ: H3950

② USB-Kabel

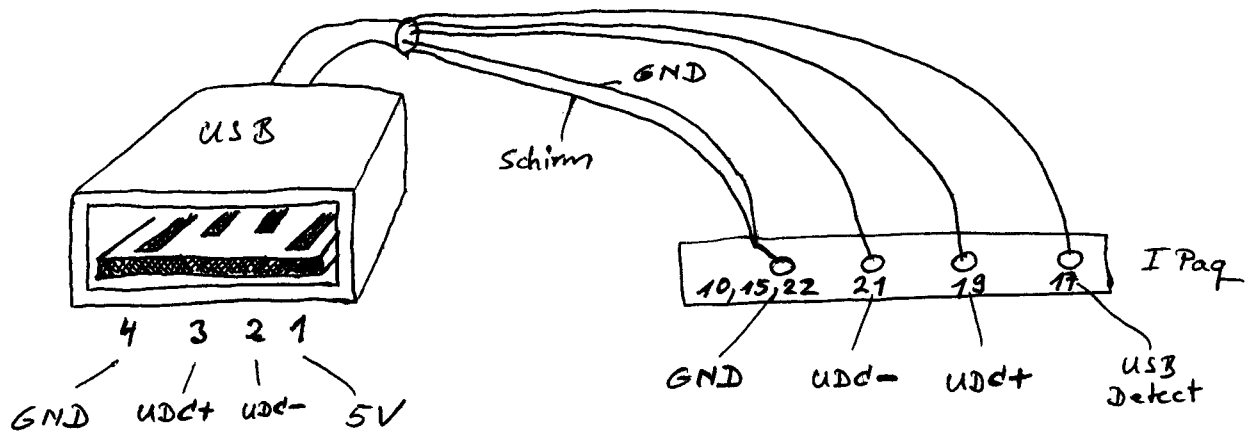

③ Serielles Kabel

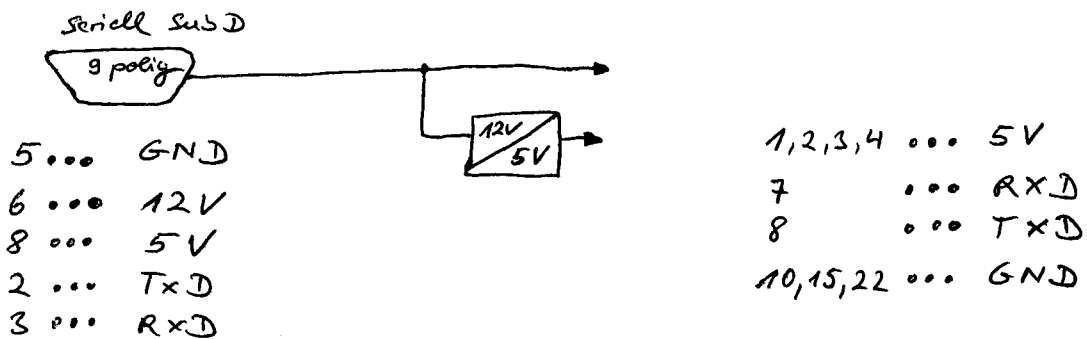

④ IPaq Steckerpinbelegung

| | |
|-------------------|-------------------|
| 1,2,3,4 ... 5V | 16 ... Reserviert |
| 5 ... Reserviert | 17 ... USB Detect |
| 6 ... RS232 DCD | 18 ... Reserved |
| 7 ... RS232 RXD | 19 ... USB UDC+ |
| 8 ... RS232 TXD | 20 ... Reserved |
| 9 ... RS232 DTR | 21 ... USB UDC- |
| 10,15,22 ... GND | |
| 11 ... RS232 DSR | |
| 12 ... RS232 RTS | |
| 13 ... RS232 CTS | |
| 14 ... RS232 RING | |

